



SLC MULTI USER LOCK SYSTEM BOLT ON INSTALLATION INSTRUCTIONS PATENT 9,273,490

1. Locate where your lock system will clear the swinging action of the gate.
2. Decide the length of 3/8 inch chain required to wrap around both sides with extra length for threading through the SLC and past 6 inches.

3. (For bolt on only)
Drill 1/2 inch holes through your gate using the SLC as a guide through the holes as shown in fig. 2.

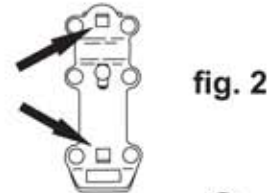

4. (For bolt on only)
Insert 1/2 inch carriage bolts into the drilled holes.
As an option, insert the last loop on your chain in between the plates at the top of the SLC so the top carriage bolt retains the chain. fig. 3

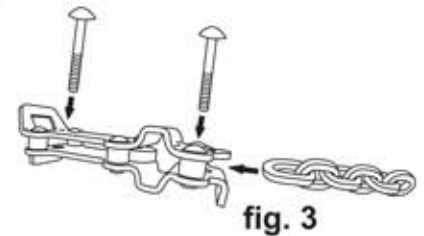

5. (For bolt on only)
Screw on the 1/2 inch tamper resistant nuts and tighten them down until they break off. As an added security feature, take a hammer and flatten the threads that are sticking out past the broken off part of the tamper resistant nuts.

6. You are now ready to insert the chain, insert the lock plates and attach your padlocks. In fig. 4 you can see a view with one side off where the gaps in the chain lock into a disc when all of the lock plates are installed.

