




**SLT MULTI USER LOCK SYSTEM
BOLT ON INSTALLATION INSTRUCTIONS
PATENT 9,273,490**

1. Locate where your lock system will clear the swinging action of the gate.

2. Drill 1/2 inch holes spaced 4 inches apart on each side of the gate as shown in fig. 2.

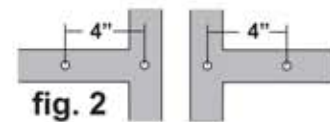


3. Insert 1/2 inch carriage bolts into the slots on the back side of the receiver tube and the lock tube.

4. Determine which side of the gate you want to mount the receiver tube and the lock tube. They are interchangeable. Insert the 1/2 inch carriage bolts into the drilled holes while they are still in the slots on the back side of the receiver tube and lock tube.

5. Screw on the 1/2 inch tamper resistant nuts and tighten them down until they break off. As an added security feature, take a hammer and flatten the threads that are sticking out past the broken off part of the tamper resistant nuts.

6. Now you can slide the cross tube through the lock tube. Make sure the rectangular hole on the bottom of the lock tube is facing towards the padlocks. On the end of the cross tube is a 3/8 inch hole. Take the supplied 3/8 inch button head screw and insert into the hole. Place the supplied lock nut on the end and tighten. This bolt keeps the tube from being fully removed while in use.

7. You are now ready to insert the lock plates and attach your padlocks.

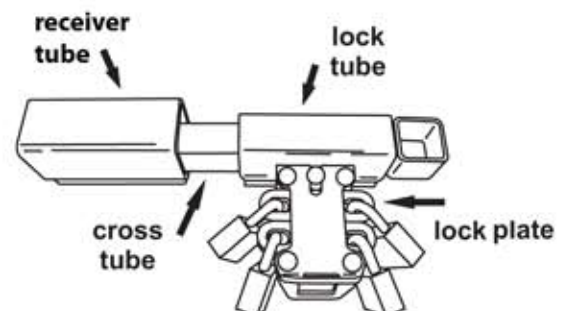

**CONTACT US
877.284.6553
info@everlocksystems.com**